

AXIS

Contents

1	Introduction	1
2	Getting Started	1
2.1	A Typical Session	2
3	AXIS Display	2
3.1	Menu Items	2
3.1.1	File Menu	3
3.1.2	Machine	3
3.1.3	View	4
3.1.4	Help	4
3.2	Toolbar buttons	4
3.3	Graphical Display Area	5
3.3.1	Coordinate Display	5
3.3.2	Preview Plot	6
3.3.3	Program Extents	6
3.3.4	Tool Cone	6
3.3.5	Backplot	6
3.3.6	Interacting	7
3.4	Text Display Area	7
3.5	Manual Control	8
3.5.1	The Axisgroup	9
3.5.2	Homing	9
3.5.3	Touch Off	9
3.5.4	Override Limits	9
3.5.5	The Spindlegroup	10
3.5.6	The Coolantgroup	10
3.6	MDI	10
3.7	Feed Override	11
3.8	Spindle Speed Override	11
3.9	Jog Speed	11
3.10	Max Velocity	11
4	Keyboard Controls	11
4.1	Feed Override Keys	11
5	Show EMC Status	12
6	MDI interface	13

7 axis-remote	14
8 Manual Tool Change	14
9 Python modules	14
10 Lathe Mode	15
11 Advanced Configuration	15
11.1 Program Filters	15
11.2 The X Resource Database	17
11.3 Physical jog wheels	17
11.4 axisrc	17
11.5 External Editor	17
11.6 Virtual Control Panel	17
11.7 Special Comments	18

1 Introduction

AXIS is a graphical front-end for EMC2 which features a live preview and backplot. It is written in Python and uses Tk and OpenGL to display its user interface.

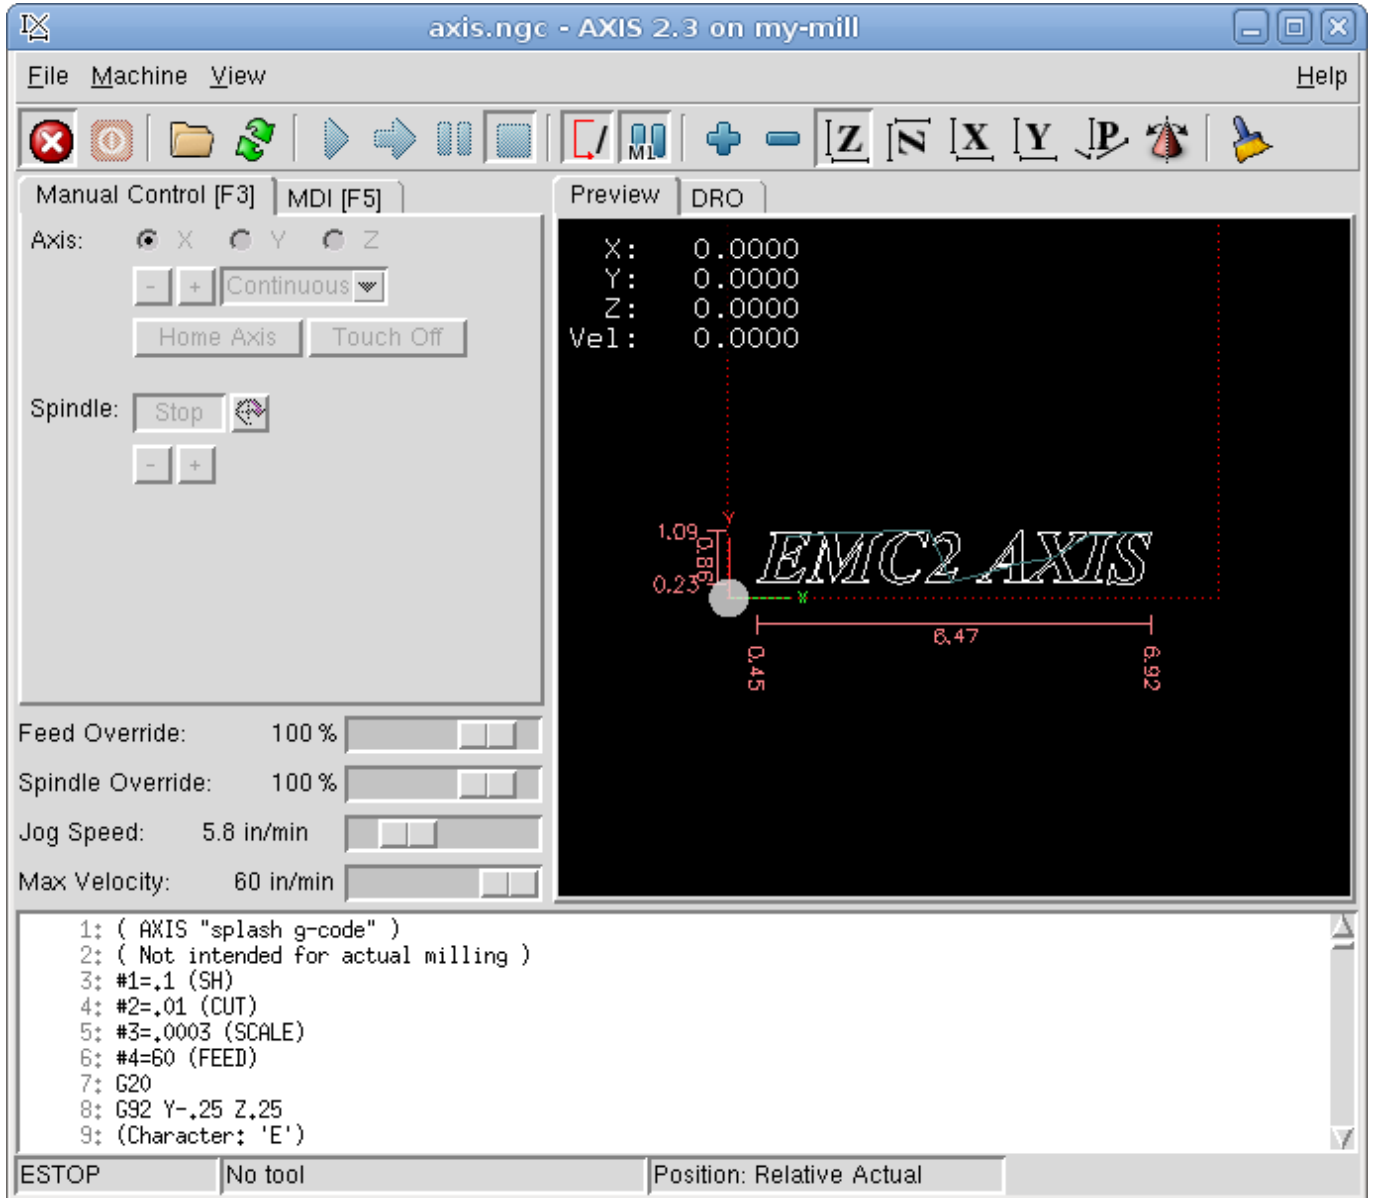


Figure 1: AXIS Window

2 Getting Started

To select AXIS as the front-end for EMC2, edit the .ini file. In the section [DISPLAY] change the DISPLAY line to read

```
DISPLAY = axis
```

Then, start EMC2 and select that ini file. The sample configuration `sim/axis.ini` is already configured to use AXIS as its front-end.

When you start AXIS, a window like the one in Figure [\[cap:AXIS-Window\]](#) is shown.

2.1 A Typical Session

1. Start EMC.
2. Clear the E-STOP (F1) and turn the Machine Power (F2) on.
3. Home all axes.
4. Load the g-code file.
5. Use the preview plot to verify that the program is correct.
6. Set the proper offsets for each axis by jogging and using the Touch Off button.
7. Run the program.
8. To run the same file again, return to step 6. To run a different file, return to step 4. When you're done, exit AXIS.

3 AXIS Display

The AXIS window contains the following elements:

- A display area that shows a preview of the loaded file (in this case, axis.ngc), as well as the current location of the CNC machine's controlled point. Later, this area will display the path the CNC machine has moved through, called the backplot
- A menu bar and toolbar that allow you to perform various actions
- "Manual Control Tab", which allows you to make the machine move, turn the spindle on or off, and turn the coolant on or off if included in the ini file.
- "MDI Tab", where G-code programs can be entered manually, one line at a time. This also shows the Active G Codes which shows which modal G Codes are in effect.
- "Feed Override", which allows you to increase or decrease the speed at which EMC executes Feed Moves the selected program. The default maximum is 120% and can be set to a different value in the ini file. See the Integrators Manual for more information on this setting.
- "Spindle Override", which allows you to increase or decrease the speed at which EMC commands the spindle to run if spindle control is configured.
- "Jog Speed", which allows you to set the jog speed within the limits set in the ini file. See the Integrators Manual for more information on the ini file.
- "Max Velocity", which allows you to set the maximum velocity for rapids and cap feed rates (except spindle synchronized motion) for dry runs. Currently only AXIS and Halui allow you to set it.
- A text display area that shows the G-code source of the loaded file.
- A status bar which shows the state of the machine. In this screen shot, the machine is turned on, does not have a tool inserted, and the displayed position is "Relative" to the machine offset (as opposed to "Absolute"), and the "Actual" (as opposed to "Commanded" position)

3.1 Menu Items

Some menu items might be grayed out depending on how you have your .ini file configured. For more information on configuration see the Integrators Manual.

3.1.1 File Menu

Open...

Opens a standard dialog box to open a g code file to load in AXIS. If you have configured EMC to use a filter program you can also open it up. See the Integrators manual for more information on filter programs.

Recent Files

Displays a list of recently opened files.

Edit...

Open the current g code file for editing if you have an editor configured in your ini file. See the Integrators Manual for more information on specifying an editor to use.

Reload

reload the current g code file. If you edited it you must reload it for the changes to take affect. If you stop a file and want to start from the beginning then reload the file. The toolbar reload is the same as the menu.

Save gcode as...

Save the current file with a new name.

Properties

Properties of the current loaded g code file.

Edit tool table...

Same as Edit if you have defined an editor you can open the tool table and edit it.

Reload tool table

After editing the tool table you must reload it.

Ladder editor

If you have loaded Classic Ladder you can edit it from here. See the Integrators Manual on setting up Classic Ladder

Quit

Terminates the current EMC session.

3.1.2 Machine

Toggle Emergency Stop F1 , Toggle Machine Power F2 , Run Program , Run From Selected Line

Select the line you want to start from first. Use with caution as this will move the tool to the expected position before the line first then it will execute the rest of the code.

Step

Single step through a program.

Pause

Pause a program.

Resume

Resume running from a pause.

Stop

Stop a running program.

Stop at M1

If you have a M1 in your g code and this is checked program execution will stop on the M1 line. Press Resume to continue.

Skip lines with /

If a line begins with / and this is checked it will skip that line.

Clear MDI history

Clears the MDI history window.

Copy from MDI history

Copies the MDI history to the clipboard

Paste to MDI history

Paste from the clipboard to the MDI history window

Calibration

This is a servo testing pop up widow for each axis. After making changes and testing them it can save them to your .ini file.

Show HAL Configuration

Opens up the HAL Configuration widow where you can monitor HAL Components, Pins, Parameters, Signals, Functions, and Threads.

HAL Meter

Opens up a window where you can monitor a single HAL Pin, Signal, or Parameter.

HAL Scope

Opens up a Scope window where you can set up and monitor Pins and Signals.

Show EMC Status

Opens up a window showing EMC's status.

Set Debug Level

Opens a window where debug levels can be viewed and some can be set.

Homing

Home any or all axis.

Unhoming

Unhome any or all axis.

Zero Coordinate System

Zero work offsets.

3.1.3 View

Top View , Rotated Top View , Side View , Front View , Perspective View , Display Inches , Display MM , Show Program , Show

.



3.1.4 Help











 






About Axis , Quick Reference

Shows the keyboard shortcut keys.

3.2 Toolbar buttons


 
From left to right, the toolbar buttons (keyboard shortcuts in []).


1.  Toggle Emergency Stop [F1] (also called E-Stop)
2.  Toggle Machine Power [F2]

3.  Open G Code file [O]
4.  Reload current file [Ctrl-R]
5.  Begin executing the current file [R]
6.  Execute next line [T]
7.  Pause Execution [P] Resume Execution[S]
8.  Stop Program Execution [ESC]
9.  Toggle Skip lines with / [Alt-M- /]
10.  Toggle Optional Pause [Alt-M-1]
11.  Zoom In
12.  Zoom Out
13.  Top view
14.  Rotated Top view
15.  Front view
16.  Side view
17.  Perspective view
18.  Toggle between Drag and Rotate Mode [D]
19.  Clear live backplot [Ctrl-K]

3.3 Graphical Display Area

3.3.1 Coordinate Display

In the upper-left corner of the program display is the coordinate display. It shows the position of the machine. To the left of the axis name, an origin symbol () is shown if the axis has been properly homed. To the right of the axis name, a limit symbol () is shown if the axis is on one of its limit switches.

To properly interpret these numbers, refer to the Position:indicator in the status bar. If the position is Absolute, then the displayed number is in the machine coordinate system. If it is Relative, then the displayed number is in the offset coordinate system. When the coordinates displayed are relative and an offset has been set, the display will include a cyan machine originmarker (). If the position is Commanded, then it is the ideal position-for instance, the exact coordinate given in a G0 command. If it is Actual, then it is the position the machine has actually been moved to. These values can differ for several reasons: Following error, dead band, encoder resolution, or step size. For instance, if you command a movement to X 0.0033 on your mill, but one step of your stepper motor is 0.00125, then the Commandedposition will be 0.0033 but the Actualposition will be 0.0025 (2 steps) or 0.00375 (3 steps).

3.3.2 Preview Plot

When a file is loaded, a preview of it is shown in the display area. Fast moves (such as those produced by the G0 command) are shown as green lines. Moves at a feed rate (such as those produced by the G1 command) are shown as solid white lines. Dwells (such as those produced by the G4 command) are shown as small Xmarks.

G0 (Rapid) moves prior to a feed move will not show up on the preview plot. Rapid moves after a T<n> (Tool Change) will not show on the AXIS preview until after a feed move. To turn either of these features off program a G1 without any moves prior to the G0 moves.

3.3.3 Program Extents

The extentsof the program in each axis are shown. At each end, the least or greatest coordinate value is indicated. In the middle, the difference between the coordinates is shown. In Figure ([cap:AXIS-Window]), the X extent of the file is from 0.00 to 6.92 inches, a total of 6.92 inches.

When some coordinates exceed the soft limitsin the .ini file, the relevant dimension is shown in a different color and enclosed by a box. In Figure ([cap:Soft-Limit]) the maximum soft limit is exceeded on the X axis as indicated by the box surrounding the coordinate value.



Figure 2: Soft Limit

3.3.4 Tool Cone

The location of the tip of the tool is indicated by the tool cone. The cone does not indicate anything about the shape, length, or radius of the tool.

When a tool is loaded (for instance, with the MDI command T1M6), the cone changes to a cylinder which shows the diameter of the tool given in the tool table file.

3.3.5 Backplot

When the machine moves, it leaves a trail called the backplot. The color of the line indicates the type of motion: Yellow for jogs, faint green for rapid movements, red for straight moves at a feed rate, and magenta for circular moves at a feed rate.

3.3.6 Interacting

By left-clicking on a portion of the preview plot, the line will be highlighted in both the graphical and text displays. By left-clicking on an empty area, the highlighting will be removed.

By dragging with the left mouse button pressed, the preview plot will be shifted (panned).

By dragging with shift and the left mouse button pressed, or by dragging with the mouse wheel pressed, the preview plot will be rotated. When a line is highlighted, the center of rotation is the center of the line. Otherwise, the center of rotation is the center of the file as a whole.

By rotating the mouse wheel, or by dragging with the right mouse button pressed, or by dragging with control and the left mouse button pressed, the preview plot will be zoomed in or out.

By clicking one of the Preset Viewicons, or by pressing V, several preset views may be selected.

3.4 Text Display Area

By left-clicking a line of the program, the line will be highlighted in both the graphical and text displays in blue.

When the program is running, the line currently being executed is highlighted in red. If no line has been selected by the user, the text display will automatically scroll to show the current line.

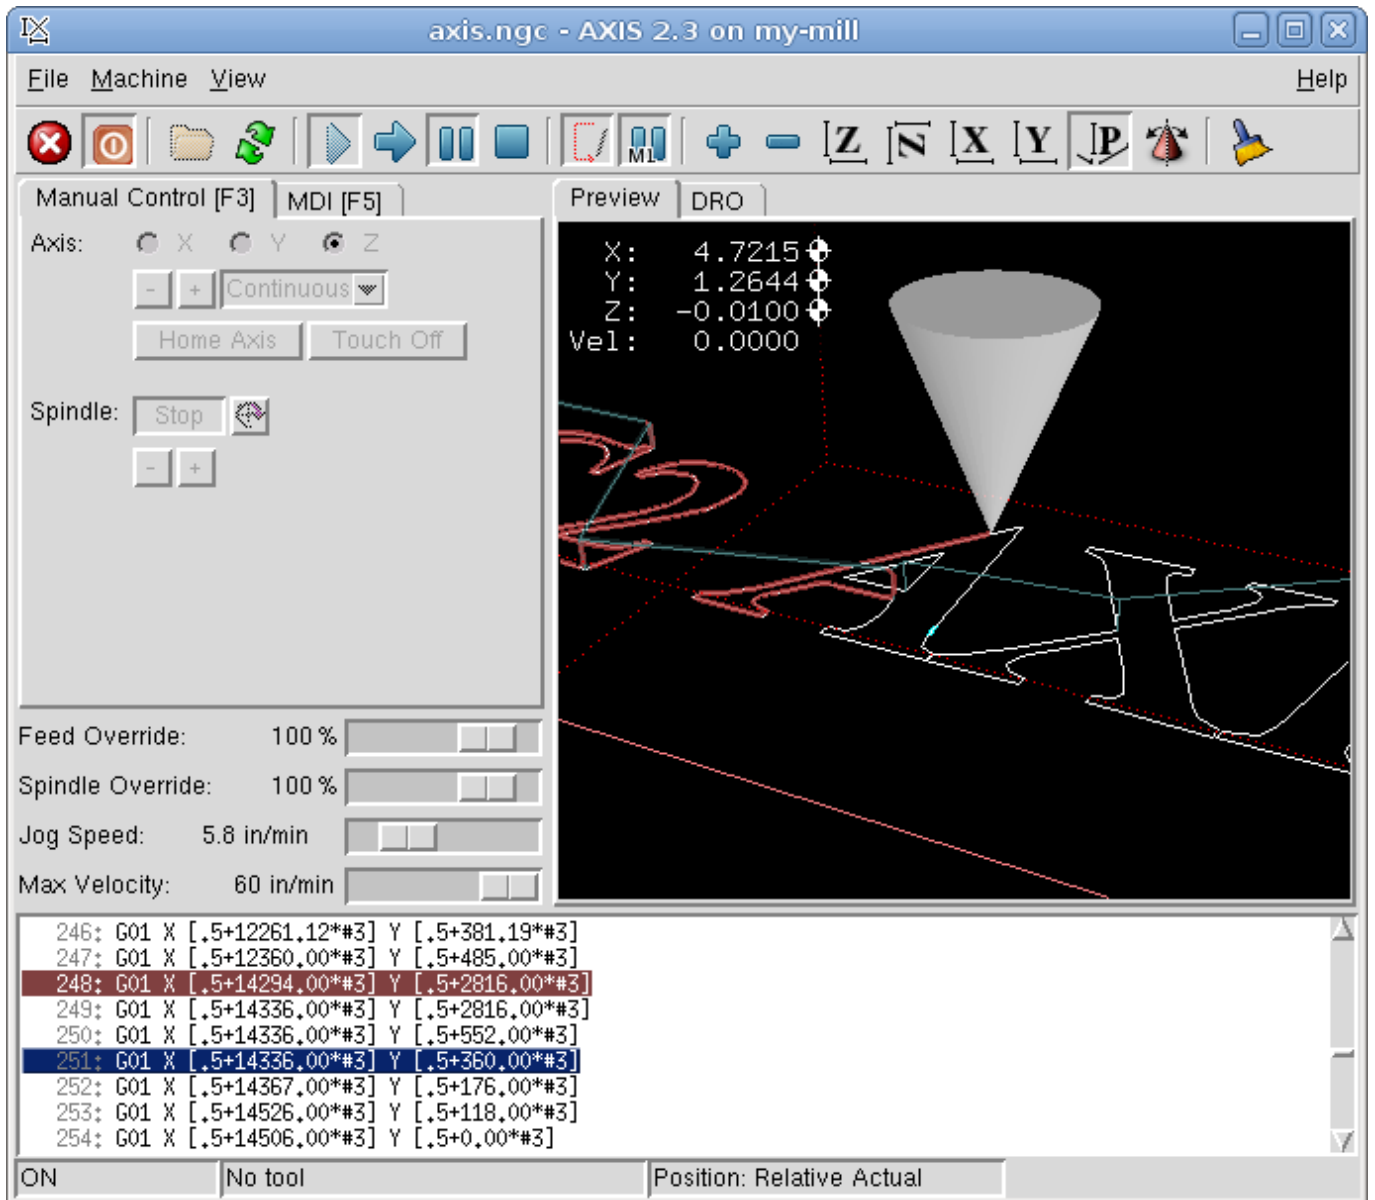


Figure 3: Current and Selected Lines

3.5 Manual Control

While the machine is turned on but not running a program, the items in the Manual Control tab can be used to move the machining center or turn different parts of it on and off.

When the machine is not turned on, or when a program is running, the manual controls are unavailable.

Many of the items described below are not useful on all machines. When AXIS detects that a particular pin is not connected in HAL, the corresponding item in the Manual Control tab is removed. For instance, if the HAL pin `motion.spindle-brake` is not connected, then the Brake button will not appear on the screen. If the environment variable `AXIS_NO_AUTOCONFIGURE` is set, this behavior is disabled and all the items will appear.

3.5.1 The Axisgroup

Axis allows you to manually move the machine. This action is known as jogging. First, select the axis to be moved by clicking it. Then, click and hold the + or - button depending on the desired direction of motion. The first four axes can also be moved by the arrow keys (X and Y), PAGE UP and PAGE DOWN keys (Z) and the [and] keys (A).

If Continuous is selected, the motion will continue as long as the button or key is pressed. If another value is selected, the machine will move exactly the displayed distance each time the button is clicked or the key is pressed. By default, the available values are:

0.1000, 0.0100, 0.0010, 0.0001

See the Configure section of the Integrators Manual for more information on setting the increments.

3.5.2 Homing

If your machine has home switches and a homing sequence defined for all axes the button will read Home All. The Home All button or the Ctrl-HOME key will home all axes using the homing sequence. Pressing the HOME key will home the current axis, even if a homing sequence is defined.

If your machine has home switches and no homing sequence is defined or not all axes have a homing sequence the button will read Home and will home the selected axis only. Each axis must be selected and homed separately.

If your machine does not have home switches defined in the configuration the Home button will set the current selected axis current position to be the absolute position 0 for that axis and will set the is-homed bit for that axis.

See the Integrators Manual for more information on homing.

3.5.3 Touch Off

By pressing Touch Off or the END key, the G54 offset for the current axis is changed so that the current axis value will be the specified value. Expressions may be entered using the rules for rs274ngc programs, except that variables may not be referred to. The resulting value is shown as a number.

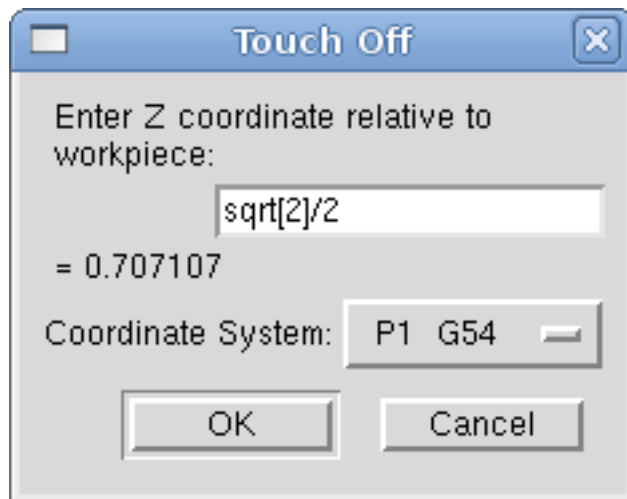


Figure 4: Touch Off

3.5.4 Override Limits

By pressing Override Limits, the machine will temporarily be allowed to jog off of a physical limit switch. This check box is only available if a limit switch is tripped.

3.5.5 The Spindlegroup

The buttons on the first row select the direction for the spindle to rotate: Counterclockwise, Stopped, Clockwise. The buttons on the next row increase or decrease the rotation speed. The checkbox on the third row allows the spindle brake to be engaged or released. Depending on your machine configuration, not all the items in this group may appear.

3.5.6 The Coolantgroup

The two buttons allow the Mistand Floodcoolants to be turned on and off. Depending on your machine configuration, not all the items in this group may appear.

3.6 MDI

MDI, allows G-code programs can be entered manually, one line at a time. When the machine is not turned on, or when a program is running, the MDI controls are unavailable.

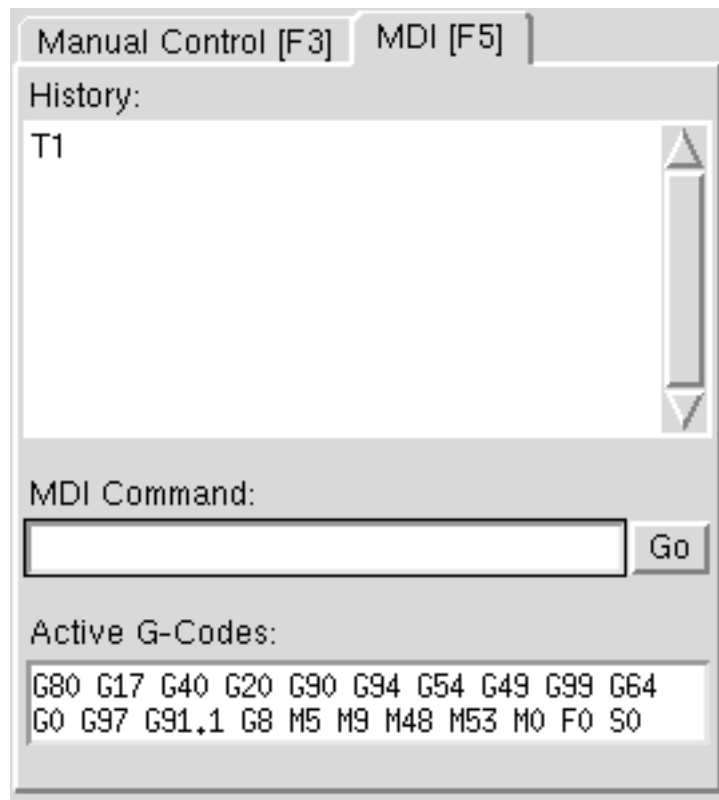


Figure 5: The MDI tab

History:

This shows MDI commands that have been typed earlier in this session.

MDI Command:

This allows you to enter a g-code command to be executed. Execute the command by pressing Enter or by clicking Go.

Active G-Codes:

This shows the modal codes that are active in the interpreter. For instance, G54 indicates that the G54 offset is applied to all coordinates that are entered. When in Auto the Active G-Codes represent the codes after any read ahead by the interpreter.

3.7 Feed Override

By moving this slider, the programmed feed rate can be modified. For instance, if a program requests F60 and the slider is set to 120%, then the resulting feed rate will be 72.

3.8 Spindle Speed Override

By moving this slider, the programmed spindle feed rate can be modified. For instance, if a program requests F8000 and the slider is set to 80%, then the resulting spindle speed will be 6400. This item only appears when the HAL pin `motion.spindle-speed-out` is connected.

3.9 Jog Speed

By moving this slider, the speed of jogs can be modified. For instance, if the slider is set to 1 in/min, then a .01 inch jog will complete in about .6 seconds, or 1/100 of a minute. Near the left side (slow jogs) the values are spaced closely together, while near the right side (fast jogs) they are spaced much further apart, allowing a wide range of jog speeds with fine control when it is most important.

On machines with a rotary axis, a second jog speed slider is shown. This slider sets the jog rate for the rotary axes (A, B and C).

3.10 Max Velocity

By moving this slider, the maximum velocity can be set. This caps the maximum velocity of axis no matter what is programmed in the g code file.

4 Keyboard Controls

Almost all actions in AXIS can be accomplished with the keyboard. A full list of keyboard shortcuts can be found in the AXIS Quick Reference, which can be displayed by choosing `Help` → `Quick Reference`. Many of the shortcuts are unavailable when in MDI mode.

4.1 Feed Override Keys

The Feed Override keys behave differently when in Manual Mode. The keys ``12345678` will select an axis if it is programmed. If you have 3 axis then ``` will select axis 0, `1` will select axis 1 and `2` will select axis 2. The remainder of the number keys will still set the Feed Override. When running a program ``1234567890` will set the Feed Override to 0% - 100%.

The most frequently used keyboard shortcuts are shown in Table [\[cap:Most-Common-Keyboard\]](#).

Table 1: Most Common Keyboard Shortcuts

Keystroke	Action Taken	Mode
F1	Toggle Emergency Stop	All
F2	Turn machine on/off	All
<code>`</code> , 1 .. 9, 0	Set feed override from 0% to 100%	Varies
X, <code>`</code>	Activate first axis	Manual
Y, 1	Activate second axis	Manual
Z, 2	Activate third axis	Manual
A, 3	Activate fourth axis	Manual
I	Select jog increment	Manual
C	Continuous jog	Manual
Control-Home	Perform homing sequence	Manual

Table 1: (continued)

Keystroke	Action Taken	Mode
End	Touch off: Set G54 offset for active axis	Manual
Left, Right	Jog first axis	Manual
Up, Down	Jog second axis	Manual
Pg Up, Pg Dn	Jog third axis	Manual
[,]	Jog fourth axis	Manual
O	Open File	Manual
Control-R	Reload File	Manual
R	Run file	Manual
P	Pause execution	Auto
S	Resume Execution	Auto
ESC	Stop execution	Auto
Control-K	Clear backplot	Auto/Manual
V	Cycle among preset views	Auto/Manual
Shift-Left,Right	Rapid X Axis	Manual
Shift-Up,Down	Rapid Y Axis	Manual
Shift-PgUp, PgDn	Rapid Z Axis	Manual

5 Show EMC Status

AXIS includes a program called emctop which shows some of the details of EMC's state. You can run this program by invoking {Machine > Show EMC Status }

acceleration	20.0
actual_position	0.0 3.91499996185 2.66483998299 0.0 0.0 0.0
angular_units	1.0
axes	3
command	n3510 M2
current_line	57
cycle_time	0.01
debug	0
echo_serial_number	11
enabled	1
estop	0
exec_state	3
feedrate	9.0
file	/home/jepler/src/emc2/nc_files/cds.ngc
flood	0
gcodes	G1 G17 G40 G20 G90 G94 G54 G49 G99 G64
homed	0 0 0 0 0 0
id	18
inpos	0
interp_state	waiting
interpreter_errcode	0
kinematics_type	1
..	.

Figure 6: EMC Status Window

The name of each item is shown in the left column. The current value is shown in the right column. If the value has recently changed, it is shown on a red background.

6 MDI interface

AXIS includes a program called MDI which allows text-mode entry of MDI commands to a running EMC session. You can run this program by opening a terminal and typing

```
mdi /path/to/emc.nml
```

Once it is running, it displays the prompt MDI>. When a blank line is entered, the machine's current position is shown. When a command is entered, it is sent to EMC to be executed.

This is a sample session of mdi.

```
$ mdi /emc2/configs/sim/emc.nml
MDI>
(0.0, 0.0, 0.0, 0.0, 0.0, 0.0)
MDI> G1 F5 X1
MDI>
(0.5928500000000374, 0.0, 0.0, 0.0, 0.0, 0.0)
MDI>
(1.0000000000000639, 0.0, 0.0, 0.0, 0.0, 0.0)
```


7 axis-remote

AXIS includes a program called `axis-remote` which can send certain commands to a running AXIS. The available commands are shown by running `axis-remote --help` and include checking whether AXIS is running (`--ping`), loading a file by name, reloading the currently loaded file (`--reload`), and making AXIS exit (`--quit`).

8 Manual Tool Change

EMC2 includes a userspace hal component called `hal_manualtoolchange`, which shows a window (Figure [cap:The-Manual-Toolchange]) when a M6 command is issued. After the OK button is pressed, execution of the program will continue.

The HAL configuration file `configs/sim/axis_manualtoolchange.hal` shows the HAL commands necessary to use this component.

`hal_manualtoolchange` can be used even when AXIS is not used as the GUI. This component is most useful if you have presettable tools and you use the tool table.

Important Note: Rapids will not show on the preview after a T<n> is issued until the next feed move after the M6. This can be very confusing to most users. To turn this feature off for the current tool change program a G1 with no move after the T<n>.

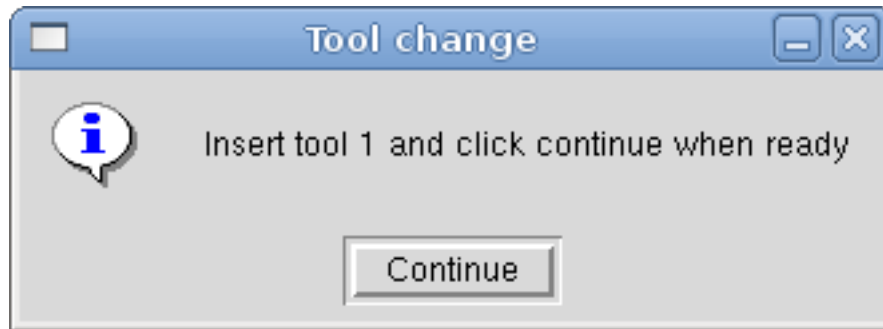


Figure 7: The Manual Toolchange Window

9 Python modules

AXIS includes several Python modules which may be useful to others. For more information on one of these modules, use `pydoc <module name>` or read the source code. These modules include:

- `emc` provides access to the `emc` command, status, and error channels
- `gcode` provides access to the `rs274ngc` interpreter
- `rs274` provides additional tools for working with `rs274ngc` files
- `hal` allows the creation of userspace HAL components written in Python
- `_togl` provides an OpenGL widget that can be used in Tkinter applications
- `minigl` provides access to the subset of OpenGL used by AXIS

To use these modules in your own scripts, you must ensure that the directory where they reside is on Python's module path. When running an installed version of EMC2, this should happen automatically. When running in-place, this can be done by using `scripts/emc-environment`.

10 Lathe Mode

By including the line

```
LATHE=1
```

in the [DISPLAY] section of the ini file, AXIS selects lathe mode. The Yaxis is not shown in coordinate readouts, the view is changed to show the Z axis extending to the right and the X axis extending towards the bottom of the screen, and several controls (such as those for preset views) are removed.

Pressing V zooms out to show the entire file, if one is loaded.

When in lathe mode, the shape of the loaded tool (if any) is shown.

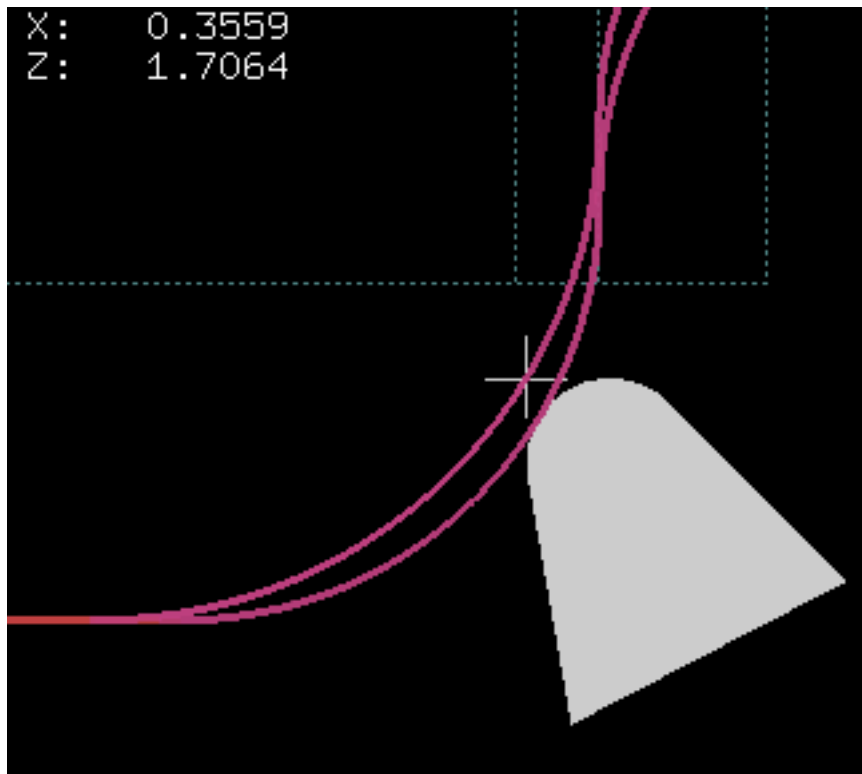


Figure 8: Lathe Tool Shape

11 Advanced Configuration

For more information on ini file settings that can change how AXIS works see the INI File/Sections/[DISPLAY] Section of Configuration chapter in the Integrators manual.

11.1 Program Filters

AXIS has the ability to send loaded files through a filter program. This filter can do any desired task: Something as simple as making sure the file ends with *M2*, or something as complicated as detecting whether the input is a depth image, and generating g-code to mill the shape it defines.

The {[FILTER]} section of the ini file controls how filters work. First, for each type of file, write a for each type of file. This program is given the name of the input file as its first argument, and must write rs274ngc code to standard output. This output is

what will be displayed in the text area, previewed in the display area, and executed by EMC when Run. The following lines add support for the image-to-gcodeconverter included with EMC2:

```
[FILTER]
PROGRAM_EXTENSION = .png, .gif Greyscale Depth Image
png = image-to-gcode
gif = image-to-gcode
```

It is also possible to specify an interpreter:

```
PROGRAM_EXTENSION = .py Python Script
py = python
```

In this way, any Python script can be opened, and its output is treated as g-code. One such example script is available at {nc_files/holecircle.py}. This script creates g-code for drilling a series of holes along the circumference of a circle.

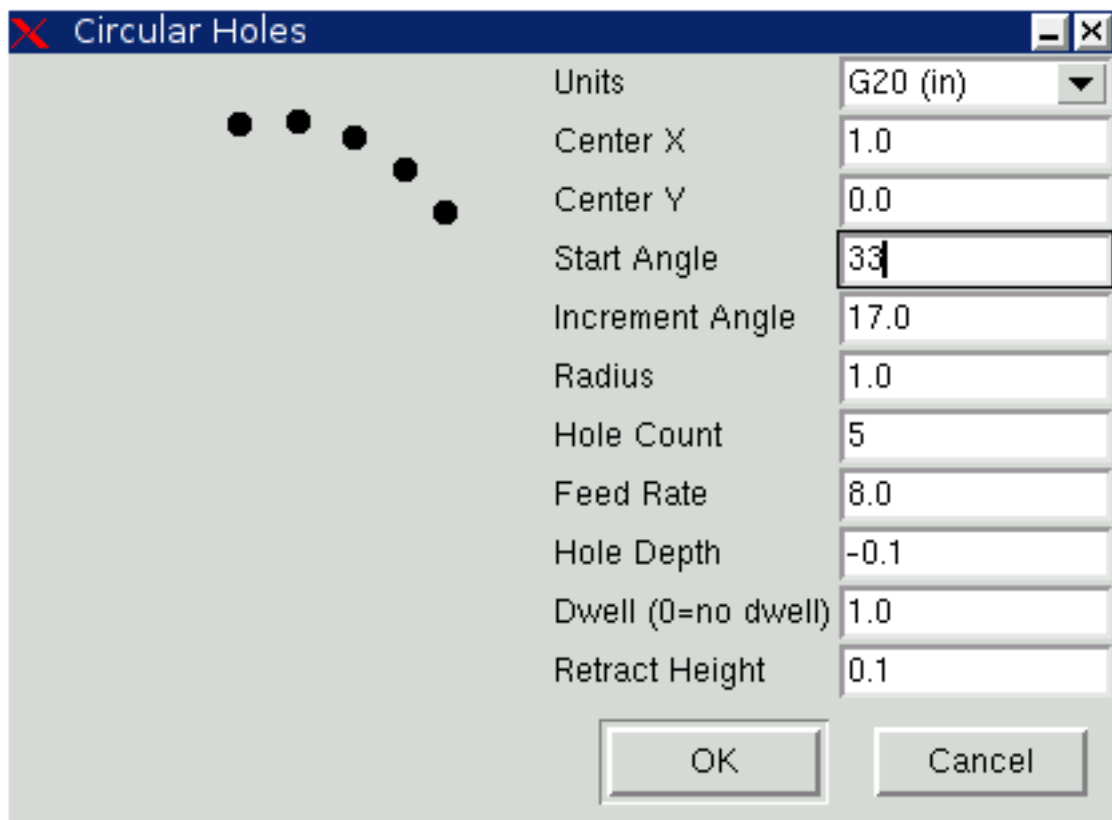


Figure 9: Circular Holes

If the environment variable `AXIS_PROGRESS_BAR` is set, then lines written to `stderr` of the form

```
FILTER_PROGRESS=%d
```

will set the `AXIS` progress bar to the given percentage. This feature should be used by any filter that runs for a long time.

11.2 The X Resource Database

The colors of most elements of the AXIS user interface can be customized through the X Resource Database. The sample file `axis_light_background` changes the colors of the backplot window to a dark lines on white background scheme, and also serves as a reference for the configurable items in the display area. The sample file `axis_big_dro` changes the position readout to a larger size font. To use these files:

```
xrdb -merge /usr/share/doc/emc2/axis_light_background
```

```
xrdb -merge /usr/share/doc/emc2/axis_big_dro
```

For information about the other items which can be configured in Tk applications, see the Tk man pages.

Because modern desktop environments automatically make some settings in the X Resource Database that adversely affect AXIS, by default these settings are ignored. To make the X Resource Database items override AXIS defaults, include the following line in your X Resources:

```
*Axis*optionLevel: widgetDefault
```

this causes the built-in options to be created at the option level `widgetDefault`, so that X Resources (which are level `userDefault`) can override them.

11.3 Physical jog wheels

To improve the interaction of AXIS with physical jog wheels, the axis currently selected in the GUI is also reported on a pin with a name like `axisui.jog.x`. Except for a short time when the active axis has just been changed, exactly one of these pins is `TRUE` at one time, and the rest are `FALSE`.

After AXIS has created these HAL pins, it executes the halfile named in `[HAL]POSTGUI_HALFILE`. Unlike `[HAL]HALFILE`, only one such file may be used.

11.4 axisrc

If it exists, the contents of `~/.axisrc` are executed as Python source code just before the AXIS gui is displayed. The details of what may be written in the `axisrc` are subject to change during the development cycle.

The following adds Control-Q as a keyboard shortcut for Quit and turns on Distance to go by default.

```
root_window.bind(<Control-q>, destroy .)
help2.append((Control-Q, Quit))
vars.show_distance_to_go.set(1)
```

11.5 External Editor

The menu options `File → Edit...` and `File → Edit Tool Table...` become available after defining the editor in the ini section `[DISPLAY]`. Useful values include `EDITOR=gedit` and `EDITOR=gnome-terminal -e vim`. For more information, see the `DISPLAY` section of the INI Configuration Chapter in the Integrators Manual.

11.6 Virtual Control Panel

AXIS can display a custom virtual control panel in the right-hand pane. You can program buttons, indicators, data displays and more. For more information, see the Integrators Manual.

11.7 Special Comments

Special comments can be inserted into the G Code file to control how the preview of AXIS behaves. In the case where you want to limit the drawing of the preview use these special comments. Anything between the (AXIS,hide) and (AXIS,show) will not be drawn during the preview. The (AXIS,hide) and (AXIS,show) must be used in pairs with the (AXIS,hide) being first. Anything after a (AXIS,stop) will not be drawn during the preview.

These comments are useful to unclutter the preview display (for instance while debugging a larger g-code file, one can disable the preview on certain parts that are already working OK).

(AXIS,hide)

Stops the preview (must be first)

(AXIS,show)

Resumes the preview (must follow a hide)

(AXIS, stop)

Stops the preview from here to the end of the file.
